

INSTALLATION INSTRUCTIONS WORK BAR STROBE 4 SLIM #BB6110A

4-7/8" (123mm)

4-3/16' (107mm)

2′ (610mm) ℃

Mounting

gasket

:≡

SPECIFICATIONS

- Input Voltage: 12-24VDC
- Operating Current: 0.96A @ 12VDC
- Operating Temperature: -40° to 149°F (-40° to 65°C)

1-1/4"

(32mm)

To

INCLUDED

- 1x LED light bar
- 1x Mounting Bezel
- 1x 3M VHB tape
- 1x Mounting Gasket
- Mounting hardware



- 1. Mount to a flat surface or one with minimal curvature.
- 2. Mark drill hole locations on the mounting surface using the gasket or VHB tape as a template.
- Drill a 25/32" (20mm) hole for the wires protruding from the rear of the unit at the correct location. Deburr any sharp edges from this hole.
- Mount the light along with the mounting gasket. Use the self -tapping screws provided to secure the light. Cover with mounting bezel.

WIRING

Black - To chassis ground White - To +VDC and memory function 1 (fuse @ 2A) Gray - To +VDC and memory function 2 (fuse @ 2A) Red - To +VDC and memory function 3 (fuse @ 2A) Yellow - Pattern selection

- Apply YELLOW wire to +VDC:
 - Less than 1 second for next pattern
 - 2-4 seconds for previous pattern
 - 7+ seconds for steady burn
- Synchronization: After setting each light at the right pattern, connect yellow wires of all light heads together.
- Phase Operation: Phase 1 flashes simultaneously with Phase 1, Phase 2 flashes simultaneously with Phase 2, Phase 1 alternates with Phase 2 (Up to 8 units can be synchronized.)







BUILTBRIGHT

INSTALLATION INSTRUCTIONS WORK BAR STROBE 4 SLIM #BB6110A



FLASH PATTERNS			
1	Single Flash, ECE R65 Phase 1*	12	Quintuple Flash Phase 2
2	Single Flash, California Title 13 Phase 1*	13	Combination Single/Double Flash Phase 1
3	Double Flash Phase 1*	14	Combination Single/Double Flash Phase 2
4	Triple Flash Phase 1*	15	Combination Single/Triple Flash Phase 1
5	Single Flash, ECE R65 Phase 2	16	Combination Single/Triple Flash Phase 2
6	Single Flash, California Title 13 Phase 2	17	Combination Single/Quintuple Flash Phase 1
7	Double Flash Phase 2	18	Combination Single/Quintuple Flash Phase 2
8	Triple Flash Phase 2	19	Single Flash Left/Right Split
9	Quadruple Flash Phase 1	20	Strobe
10	Quadruple Flash Phase 2	21	Cruise(20%)
11	Quintuple Flash Phase 1	22	Steady Burn

* Sync w/ 6002X Series Mini Bar



WARRANTY

ARC Lighting provides a 5 year warranty against manufacturing defects from date of purchase. If warranty service is needed, please contact the authorized dealer of where your product(s) were originally purchased.

Customer Support:

- Phone: (888) 608-2220
- Email: support@arc.lighting
- Website: www.arc.lighting/warranty-claim



O(1):O !H-12:1 ⊙*:19:



BASTROP, TEXAS 78602 UNITED STATES OF AMERICA WWW.BUILT-BRIGHT.COM



