





#9GTA2

TOYOTA TUNDRA TRD GEN 3
GRILLE BRACKET FOR 8" XTREME BAR



PART LIST

- A: 2x Left Front Plates
- B: 2x Right Front Plates
- C: 2x Left Back Plates
- D: 2x Right Back Plates
- E: 4x M6 Torx Head Screws
- F: 4x M6 Lock Washer

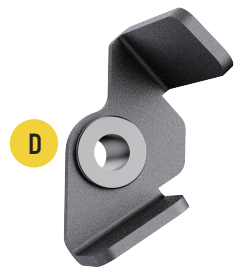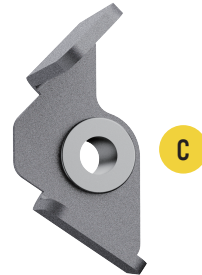

REQUIRED TOOLS

- Security Torx L-Key(Included)
- M6 Hex Wrench(Not included)




TECH NOTES

- No cutting or drilling is required for Tiny Monster Grille™ lights installation.
- Approximate install time: 20 minutes (not including harness installation)




STEP 1 – PLAN THE INSTALL

Unbox the grille brackets and lay out all of the components. Determine where you want to install the lights on the grille. This grille can install up to 4 lights. The bracket installation location can refer to Figure 1.

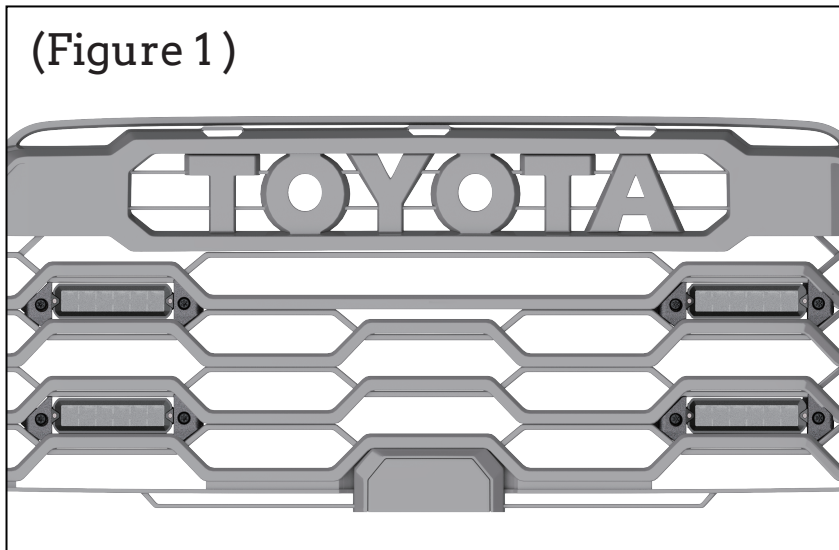

NOTES:

This bracket model fix to 8" xtreme bar, 6402DT/6402YT. one kit can install to 2 light bars.

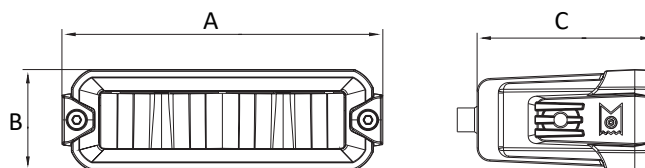

A: 7-1/2"

B: 1-1/2"





C: 2-1/2"

(Xtreme bar SKU #6402DT/6402YT sold separately)



STEP 2 – INSTALL THE GRILLE BRACKET + LIGHT

1. Join the light bar, left front plate, right front plate with two(2) M6 hex screws. (Figure 2)
2. Put the left back plate and right back plate behind the grille. (Figure 3)
3. Mount the light to the back plate with two(2) torx head screws. (Figure 4)

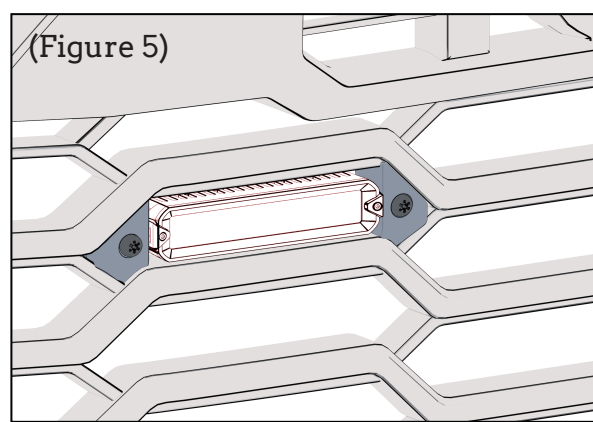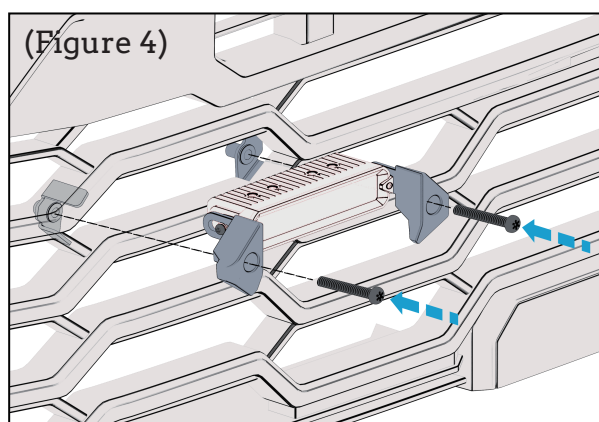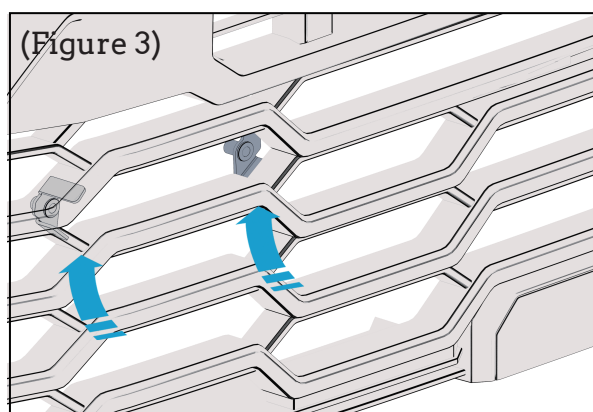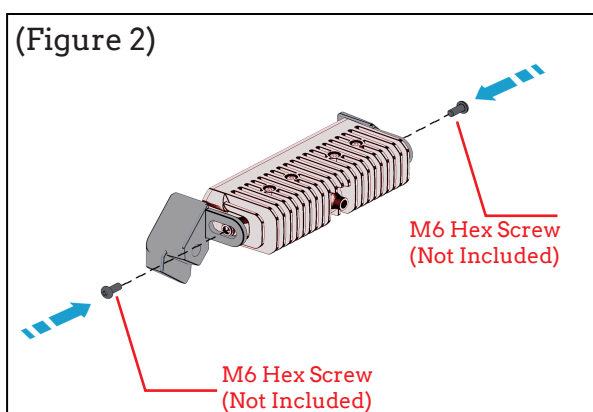

ARC LIGHTING
BASTROP, TEXAS 78602
UNITED STATES OF AMERICA
WWW.ARC.LIGHTING



⚠ WARNING: CANCER
AND REPRODUCTIVE HARM
WWW.P65WARNING.SCA.GOV